

# Options

Wall outlets range

## Push fit & brass wall outlets

Aqualisa Products Limited, The Flyer's Way, Westerham, Kent TN16 1DE  
Customer Helpline: 01959 560010 Facsimile: 01959 560030  
Website: [www.aqualisa.co.uk](http://www.aqualisa.co.uk) E-mail: [enquiries@aqualisa.co.uk](mailto:enquiries@aqualisa.co.uk)

### Important information

**!** This product must be installed by a competent person in accordance with the relevant current Water Supply Regulations.

The Aqualisa Options range of accessories are supplied complete with a 2 year guarantee.

In the event of any product problems, please contact the Aqualisa Customer Helpline on 01959 560010.

### Push fit wall outlet

**1** Prepare pipework from the valve, diverter or processor to the required position for the hose outlet using a Ø15mm copper pipe. Slide the wall spacer down the projecting pipe flush with the finished wall surface.

**2** Slide the 15mm gripper ring down the projecting pipe flush with the wall spacer fitting.




**3** Trim the projecting pipe to a length of 15-22mm, measured from the face of the gripper ring, using a rotary type cutter. If a hacksaw is used, the pipe end must be carefully de-burred and chamfered.

**4** Clean and lubricate the pipe using a suitable (silicone based) lubricant.

**5** Remove the locking screw, rotate the chrome outlet assembly and remove the outlet from the wall mounting plate.



**6** Ensuring the locking screw hole is positioned at the bottom, place the wall outlet mounting plate onto the pipe assembly and mark and prepare the fixing points, using the fixings provided, if suitable.

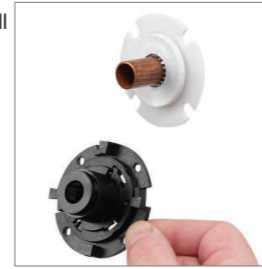

**7** Ensuring the locking screw hole is positioned at the bottom, secure the wall mounting plate to the wall using the screws provided, if suitable.



**8** Ensuring the 'O' ring is in the correct position on the mounting plate spigot, place the wall outlet onto the mounting plate in the 5 o'clock position and rotate clockwise until a stop is reached.

**9** Refit the locking screw taking care not to overtighten.



**10** Ensuring the hose washers are in the correct position, attach the hose (supplied separately) to the wall outlet.



### Brass wall outlet

**1** Run a 15mm outlet pipe from the processor to the preferred position for the brass wall outlet. The pipe must terminate with a suitable ½" BSP female fitting.

**2** Apply sealing tape as required to the ½" BSP thread.

**3** The outlet assembly is supplied with an additional back plate. If required, offer the back plate assembly into position and secure the wall outlet into place ensuring the assembly is correctly aligned.



**4** Ensuring the hose washer is in place, connect the hose (supplied separately) to the wall outlet assembly and run the shower for 15 seconds without the handset attached to clear any debris, which may be present.

